

Operating Instructions

BIOSTEAM CENTER

LABORATORY EQUIPMENT IN
STAINLESS STEEL



REITEL Feinwerktechnik GmbH
Senfdamm 20 | 49152 Bad Essen
Phone: +49(0)5472-9432-0 | Fax: +49(0)5472-9432-40
www.reitel.com | info@reitel.com

Dear Customer!

The BIOSTEAM CENTER is perfectly suited for steam cleaning workpieces. It can be activated either manually or with the foot pedal included in delivery. The wide opening and integrated illumination ensure comfortable working conditions. Steam is absorbed at the back of the steam center and condenses in the special filter, offering a clear view for the user. The efforts to clean the basin or other areas in the laboratory are considerably reduced.

Any other use or use beyond this is deemed improper. For resulting damage the user/operator of this device is solely responsible.

Prior to installation of the device operating instructions and especially the safety instructions must be read and followed by all personnel who use this device.

After having unpacked the device, please check carefully whether transportation damages of any kind have occurred. If that is the case, the carrier or manufacturer must be notified within 3 days. The company will **not** be responsible for any damages found after that.

These operating instructions must be read and followed by all personnel who use this device. To ensure quick access we recommend to keep it at a safe place near the device. In case of loss it can be ordered at a nominal fee from the manufacturer.

This document is protected by the copyright law. Passing on or duplication of this document or extracts thereof, evaluation and communication of its contents are not authorised. In case of loss it can be ordered from the manufacturer.

INDEX

1	TECHNICAL DESCRIPTION	4
1.1	BASIC EQUIPMENT.....	4
1.2	SPECIAL ACCESSORIES.....	4
1.3	OPERATING ELEMENTS.....	5
1.4	TECHNICAL DATA.....	8
2	SAFETY NOTES	9
2.1	GENERAL SAFETY NOTES.....	9
2.2	SPECIFIC SAFETY INSTRUCTIONS.....	10
3	EQUIPMENT	11
4	NOTES FOR THE USER	11
4.1	INSTALLATION.....	11
4.2	OPERATION.....	11
5	TROUBLESHOOTING	12
6	MAINTENANCE	12
7	WARRANTY	13
8	DISPOSAL REGULATIONS	16
9	SPARE PARTS LIST	17
10	EU DIRECTIVE	18

1 Technical Description

1.1 Basic Equipment

- Steam Center with extraction, drain hose, integrated fleece filter, steam check valve (ball valve), foot pedal, power connection and working lamp

1.2 Special Accessories


- Order-No.: 20109000 Activated carbon filter

1.3 Operating Elements


- 1 Housing
- 2 Power switch
- 3 Selector switch
- 4 Lamp (inside)
- 5 Drip tray (with fleece inlay) and access to filter cassette (14)
- 6 Foot pedal socket (left side of the housing)
- 7 Water level sight glass
- 8 Drain outlet (optionally left or right)
- 9 Device fuse (2 x 3,15 A, located in electrical outlet under cap)
- 10 Electrical connection
- 11 Foot switch
- 12 Exhaust fan cover with air filter
- 13 Special accessories: Activated carbon filter to be screwed onto the exhaust fan
- 14 Filter cassette condenser (stainless steel wool)
- 15 Fleece inlay




Device view

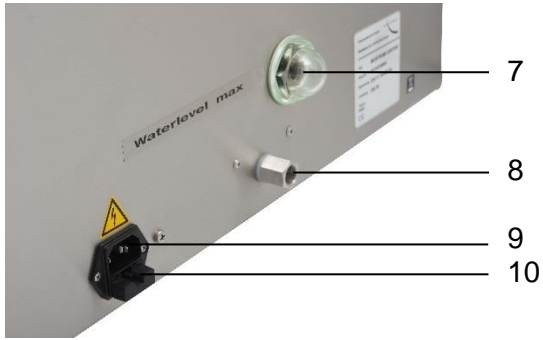

Lateral view

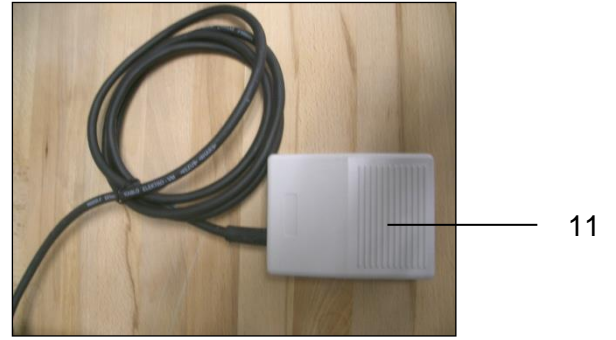

Footswitch

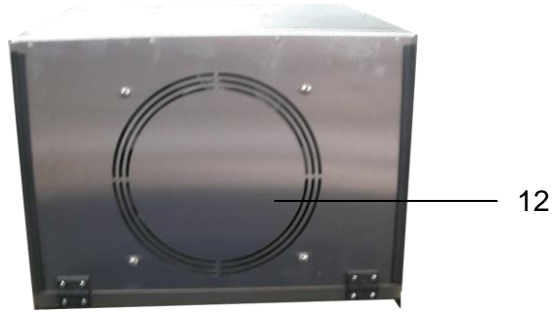

Rear side



Exhaust fan



Filter cassette for condenser and fleece inlay

1.4 Technical Data

Line voltage	230 V/50–60 Hz
Current consumption	200 W
Height/width/depth	600/540/510 mm
Weight	35 kg
Suction power	1.860 m ³ /h
Sound level	77 dB(A)
Housing	Stainless steel
Made in Germany (Subject to modifications)	

2 Safety Notes

2.1 General Safety Notes

- All equipment undergoes final inspection and testing before leaving our factory. However, if equipment is damaged during shipping or through any other circumstances, it must not be used in service. Please check the device regularly for damages. Damaged parts should be replaced immediately.
- All power/air/water/gas sources should be rated for the demands of the device as listed in the technical data sheets. Maximum ratings must not be exceeded. All VDE (Verein Deutscher Elektro-Ingenieure) standards should be followed. Equipment should be grounded according to standards.
- Adherence to valid regulations regarding necessary checks (e.g. according to Accident Prevention & Insurance or electrical equipment) is exclusively taken over by the buyer/user of this product.
- This device has been designated to be used only for its intended purpose. All other applications must be prohibited for safety reasons as otherwise the manufacturer's warranty expires.
- The device should be set-up in a clean, well-ventilated room, if necessary under a hood.
- Supporting surfaces should be straight, flat and adequately stable.
- Don't place anything on top of the machine.
- To avoid injury, appropriate protection should be worn (e.g. gloves, safety glasses, safety shoes, hearing protection etc.)
- If the machine is defective or working improperly it must be taken out of service. In case of further use of the machine the owner will be held responsible for any consequential damage.
- To prevent accidents from water, fire or explosion, all power/air/water/gas sources should be turned off after working hours and during breaks, and secured against unauthorized access.
- When carrying out maintenance works or repairs or when opening the device always turn off the main power switch and unplug the whole unit.
- Repairs should be carried out only by the manufacturer or by qualified and certified personnel appointed according to chapter 7 – warranty.
- In case of leaking water out of housing or tank shut down device and call service.
- Check all hose joints for tightness, if necessary fasten clamps.

2.2 Specific Safety Instructions

Note:

- The device distance to the rear wall must not be less than 25 cm.
 - Keep the housing dry and clean.
-
- Always respect the instructions for your steam cleaner.
 - Always respect manufacturer's instructions when using germ-restraining cleaning additives. Do not use cleaning agents or disinfectants containing chlorine. Decalcification is not necessary. Always respect the safety notes and the requirements stipulated in the product data/safety data sheets for handling hazardous materials.
 - Please respect instructions or legal provisions for the object to be cleaned.

3 Equipment

The equipment delivered is ready for immediate use. The sealed plug can be connected directly to the mains supply 230 V/16 A. For installation please refer to chapter 2.

4 Notes for the User

4.1 Installation

1. Establish electrical connections.
2. The drain tap can be attached to the drain outlet (8) either on the left or right side of the device. Carefully screw the tap into the drain outlet as far as it will go (ensure not to damage the integrated gasket). Screw the blind plug (included in delivery) into the drain outlet that is not used.
3. Install the drain hose. Connect the hose to the end of the drain outlet (8) and fasten hose clamp. Close the ball valve.
4. Plug the cable of the foot pedal (11) into the appliance socket (6) and position it at an accessible place without tripping hazards.

4.2 Operation

1. Turn on the main power switch (2) to position I MAN (manual switching), Position II FOOT (foot pedal).
2. Turn on the exhaust fan with selector switch (3).
3. Hold the objects which need cleaning together with the steam gun into the steam center, protecting your health and the environment.
4. After finishing work switch off the appliance and the exhaust fan.

5 Troubleshooting

Device won't turn on.	a. Check fuse of the building. b. Check appliance fuse (9).
Fan doesn't work.	Check foot pedal. Turn appliance on by turning selector switch to position MAN.
Lamp (4) doesn't shine.	Defective lamp → replace it.
Insufficient extraction power.	a. Filter (see chapter 6, maintenance) dirty or clogged. Replace filter. b. Drain outlet must not be permanently open. Install ball valve.

6 Maintenance

- Regularly check the device for visible damages to the housing or power cord.
- Regularly clean the housing with a damp cloth.
- Change the fleece (15) about once a week, depending on the degree of contamination.
- Change the filter cassette in the drip tray (5) at least semi-annually. Remove the fleece (15) and then the filter cassette. A new filter cassette (14) can be ordered from the manufacturer.
- Empty the drip tray (5) according to water level sight glass (7) at least once a week at the end of the drain outlet (8) via ball valve.
- Replace the exhaust filter (12) at the back of the device about every four weeks, depending on the degree of contamination. Pull the power plug, then remove the four cross recessed head screws and fold back the rear panel. Unscrew the nuts and replace the filter. Screw the back panel on again.

7 Warranty

We, REITEL Feinwerktechnik GmbH, offer a 1 year's warranty beginning from the proven date of purchase. This warranty covers all defects traceable to materials, design or workmanship. The following warranty regulations are applicable:

Within the warranty period Reitel Feinwerktechnik GmbH or an authorized distributor agrees at its sole option, to perform repair or replace this product at no charge covering all defects traceable to materials, design or workmanship. Warranty only applies to appropriate use and regular maintenance of this product according to the operating instructions. Claims under warranty are restricted to complementary performance. Additional claims, especially claims for indemnifications, are not covered by this warranty.

1.

Warranty claims have to be addressed to the distributor the product was purchased from or directly to our service department.

Contact:

REITEL Feinwerktechnik GmbH

Senfdamm 20

49152 Bad Essen

Germany

Phone: +49(0)5472-9432-32 (Service Department)

Phone: +49(0)5472-9432-0 (Reception)

Fax-No: +49(0)5472-9432-40

2.

In case of warranty claim application the sales receipt or your purchase invoice showing the date of purchase of the product and the serial number must be furnished. Securely pack and ship the device, freight charges prepaid, at your own risk to us, along with a report describing the defect. We reserve the right to decline warranty if this information has been removed or modified after purchase of the product or if they are not included in case of warranty claims.

3.

Warranty repairs have to be performed by REITEL Feinwerktechnik GmbH or by authorised distributors. Repairs performed by non-authorised companies will void the claim for refund since damages to the product resulting hereof are not covered by warranty.

4.

If the unit sent in for repair or replacement is still under the original warranty then warranty is to the end of the original 1 year warranty.

5.

If the unit is destined to be operated in another country than originally intended and manufactured for, modifications to the product might be necessary to comply to special technical and /or safety standards of that specific country. Such modifications are no defects traceable to materials, design or workmanship. and are therefore expressly excluded from warranty claims.

Modification costs or damages arising from operation of the product under deviating conditions are not covered by warranty.

6.

Exclusions from warranty:

- Service and maintenance work as well as repair and replacement of consumables according to our consumables' list
- Transportation cost of the machine or installation and dismounting expenses incurred
- Damages due to use of the product other than for its intended purpose
- Damages due to faulty installation or insufficient maintenance of the product (e.g. decalcification)
- Damages due to natural disaster e.g. lightning, water, fire, act of nature beyond control, war, inadequate line voltage, insufficient ventilation, no decalcification, insufficient care and cleaning or non-adherence to operation and maintenance instructions according to the accompanying operation guide.
- Damage due to use of the product other than in accordance with the instructions provided by REITEL Feinwerktechnik GmbH;
- The warranty does not cover the cost of removal and replacement of parts and accessories, unless supplied as original equipment by REITEL Feinwerktechnik GmbH
- All kind of damages occurred not directly at the device as well as consequential damages (e.g. damages to furniture due to a lack of water, downtime of the machine, material, lost working hours, wages and other consequential damages).

This warranty shall be rendered null and void if:

- the product has been subject to any modification, repair or replacement other than as authorised by REITEL Feinwerktechnik GmbH
- the product is continued to be operated despite a functional defect

7.

The warranty is device specific and may be claimed, within the warranty period, by any person who has legally acquired the device.

8.

Consumables are excluded from warranty. Spare parts are subject to a warranty coverage of 6 months against all defects traceable to materials, design or workmanship according to these warranty regulations.

9.

Legal default claims on the part of the purchaser remain unaffected by this warranty.

10.

We reserve the right to charge a processing fee if you do not want to carry out a repair and the device should be returned unrepared.

11.

Please note:

Upon repair or replacement of this unit, personal data and settings might get lost or damaged. We don't accept liability for all kind of data loss. The customer is advised to backup essential programs and data before sending for service.

12.

This warranty shall be interpreted in accordance with German law to the exclusion of UN sales law. Place of jurisdiction is our business location.

13.

If any provisions of this warranty are judged to be illegal or unenforceable, the continuation in full force and effect of the remaining provisions will not be prejudiced. The provisions of this warranty judged to be illegal or unenforceable shall be construed so as to give effect to the intent manifested by the provision held invalid, illegal or unenforceable and to give effect to section 13 hereof.

14.

Should you need to borrow a device while your device is being repaired, please contact Messrs. REITEL or your distributor. These loans are a service for which availability cannot necessarily be guaranteed. After the warranty period, a fee may be charged for loan equipment as well as for shipping and packaging.

8 Disposal Regulations



According to valid laws our devices are properly disposed of according to B2B – Regulations for proper disposal. Pls. contact your local dealer for additional information.

9 Spare Parts List

Best.-Nr.: Ref.:		Menge Qty.	ME Unit
E7601900	Absauggebläse / Extractor fan	1	St./pc.
20109000	Aktivkohlefilter (Nachrüstung ab Geräte No. 281 möglich) / Activated carbon filter (retrofitting for appliances from no. 281)	1	St./pc.
E7336200	Nachrüstsatz LED-Leuchte, inkl. Einbauanleitung, Adapterplatte und Blende / Retrofit kit LED light	1	Satz/set
E7208300	Daylight Leuchte 9W IP 54 (ab Geräte No. 191) / Daylight lamp 9W IP 54 (from device no. 191)	1	St./pc.
E1090340	Energiesparlampe Ersatzteil für Daylight Leuchte 9W / Energy saving lamp (spare part for daylight lamp 9W)	1	St./pc.
E6131200	Einbausteckdose mit Abdeckung / Built-in socket with cover	1	St./pc.
E7049200	Feinsicherung / Fine fuse	1	St./ pc.
E6306620	Filterkassette rund (ab Geräte No. 250) / Round filter cassette (from device no. 250)	1	St./pc.
E7805420	Filtermatte, Arbeitsraum (Einlegevlies rot) ab Geräte No. 250 / Filter mat, working area (red fleece inlay) from device no. 250	3	Satz/set
E6151630	Filterscheibe hinten, d=230mm (ab Geräte No. 281) / Filter disc backside, d=230 mm (from device no. 281)	1	St./pc.
E6189400	Fussschalter (ab Geräte No. 186) / Foot pedal (from device no. 186)	1	St./pc.
E6060200	Gummipuffer (4Stück) / Rubber feet (4 pcs.)	1	Satz/set
E6292510	Halter für Dampfpistole (incl. Schrauben) / Holder for steam gun (incl. screws)	1	St./pc.
E6152100	Kantenschutzprofil / Edge protection profile	1	m
E6163800	Kappe / Cap	2	St./pc.
E6003710	Kugelhahnbaugruppe inclusive Anschluß + Schlauch / Ball valve unit incl. connection and hose	1	St./pc.
E7871800	Lochblech-Filtereinlage / Perforated plate-filter cartridge	1	St./pc.
E6076700	O-Ring / O-Ring	2	St./pc.
E6064800	Schalter beleuchtet grün / Green illuminated switch	1	St./pc.
E6042100	Schalter Wahl I-0-II / Selector switch I-0-II	1	St./pc.
E7803800	Schauglas gewölbt, mit Dichtung / Curved sight glass, incl. seal	1	St./pc.
E6065000	Schutzkappe für Schalter / Protective cap for switch	1	Satz/set
E7049700	Sicherungshalter / Fuse holder	1	St.pc.
E6071900	Zuleitung / Feed	1	St./pc.

10 EU DIRECTIVE

EU-Konformitätserklärung EC-Conformity Declaration CE-Déclaration de Conformité

im Sinne der EG-Richtlinie 2006/42/EG über Maschinen (Anhang II A)
according to Machinery Directive 2006/42/EC (Appendix II A)
au sens de la Directive Machines 2006/42/CE (Annexes II A)

Name und Anschrift des Herstellers/Name and address of manufacturer/Nom et adresse du fabricant:

Reitel Feinwerktechnik GmbH
Senfdamm 20
49152 Bad Essen

Diese Erklärung bezieht sich nur auf die Maschine in dem Zustand, in dem sie in Verkehr gebracht wurde; vom Endnutzer nachträglich angebrachte Teile und/oder nachträglich vorgenommene Eingriffe bleiben unberücksichtigt. Die Erklärung verliert ihre Gültigkeit, wenn das Produkt ohne Zustimmung umgebaut oder verändert wird./This declaration relates exclusively to the machinery in the state in which it was placed on the market and excludes components which are added and/or operations carried out subsequently by the final user. This declaration will become invalid if any unauthorised modification is made to the product./Cette déclaration concerne exclusivement les machines dans l'état dans lequel elles ont été mises sur le marché et exclut des composants ajoutés et/ou les opérations effectuées par la suite par l'utilisateur final. La présente déclaration perd sa validité si des modifications non-autorisées ont été apportées à la machine.

Hiermit erklären wir, dass die nachstehend beschriebene Maschine/We hereby declare that the machine described below/Nous déclarons que la machine ci-dessous

Produktbezeichnung/Product name/Nom du produit: Abdampfcenter/
Steam Center with Suction/
Centre à vapeur avec aspiration

Typenbezeichnung/Type/Type: BIOSTEAM CENTER

allen einschlägigen Bestimmungen der Maschinenrichtlinie 2006/42/EG und 2011/65/EU (RoHS 2) entspricht. Die Schutzziele der Richtlinie 2014/35/EU über elektrische Betriebsmittel werden eingehalten./ is in conformity with all applicable requirements of the Machinery Directive 2006/42/EC and 2011/65/EU (RoHS 2). The safety objectives of the Directive on Electrical Equipment 2006/95/EC are adhered to./ est conforme aux dispositions applicables de la Directive Machines 2006/42/CE et 2011/65/CE (RoHS 2). Les objectifs de sécurité de la Directive sur les Matériels Electriques 2006/95/CE sont respectés.

Angewandte harmonisierte Normen/Harmonised standards applied/Normes harmonisées appliquées:

EN ISO 12100:2011 DIN EN 61010-1:2020
DIN EN60204-1:2019 DIN EN 45635-1

Bevollmächtigter für die Zusammenstellung der relevanten technischen Unterlagen/Representative authorised to compile the relevant technical documentation/Personne autorisée à constituer la documentation technique pertinente:

Daniel Reitel
Reitel Feinwerktechnik GmbH
Senfdamm 20
49152 Bad Essen

11.02.2021

Ort, Datum
Place, Date
Lieu, Date

Daniel Reitel, Geschäftsführender Gesellschafter/Managing Director/
Directeur Général



Unterschrift/Signature/
Signature

We manufacture in compliance with Quality Management ISO 13485:2016 incorporating established standards.

